Actuating the door opener-Internal phone number of the door Internal phone Direct number of the door **Activating diversion from (follow me)** 5 Deactivating diversion from (follow me) 5 Activating diversion to (diversion by the telephone system) = external diverted inter- number or september of septemb External phone 1=permanent == 1= external == 2=on busy == 2= internal == 3= ahbrevia Deactivating diversion to (diversion by the telephone system) ternal phone number Diversion to - call forwarding (diversion by the ISDN exchange) B Destination: # Destination: Diversion: Enter the 1 = externalEnter the external phone system or m phone on busy number multiple number or = phonesubscriber book phonebook number number mumber 6 5 answer deactisystem or multiple ₩ 💠 subscriber number

Notes: On telephones, particularly telephones that use the pulse dialling method that do not have a **★**key or which do not support these functions, you must press the digits **9** instead of the **★**key.

AGFEO GmbH & Co. KG
Ident. No. 523 704
Gaswerkstr. 8
Modifications and errors reserved
D-33647 Bielefeld
Printed in Germany 0991
Internet: http://www.agfeo.de

AS 33, AS 34, AS 40



Short-form operating instructions for analog and ISDN terminals

analog and ISDN terminals
External call ————————————————————————————————
Dial "0" to seize an outside line Automatic outside line seizure
External call and seizing a specific MSN (instead of seizure with "0") ————
External phone number(MSN)
Reserving an outside line (B channel) (seizure with "0") ——————————————————————————————————
Internal call—————————————————————————————————
Dial "0" to seize an outside line Automatic outside line seizure
Internal phone number - 10 to 99 depending on the decade
Internal forwarding without announcement ————————————————————————————————————
∂ R □ A □ □ □ □ □ □ □ □ □ □ □ □ □
External forwarding ————————————————————————————————————
∂ R 0 # ∂ R * 2 0 Å
Answering a waiting call / Rejecting a waiting call—————
) * R * 8) / * R * 2 1)
Internal call waiting announcement ————————————————————————————————————

Call waiting prevention on/off -













9

1 = 1st internal phone number 2 = 2nd internal phone number



